



These aren't Troubleshooting tips They're tips for avoiding trouble altogether!


✈ The correct way to connect the battery is to put on the negative first and the positive last. To take off the battery or reboot the logic, take off the positive first.



🖥 The DBA tables are a lot like your Personal Computer (if you've "entered the computer age"): to clear errors, reboot the system by turning it off, waiting 30 seconds, and turning it back on again.

- a. Take off the positive battery lead. (red wire)
- b. On the left board on the upper left corner is Jumper L K 3, pull it off.
- c. Replace the positive lead on the battery
- d. Put the jumper back on.

Afterwards, your display should read as normal.

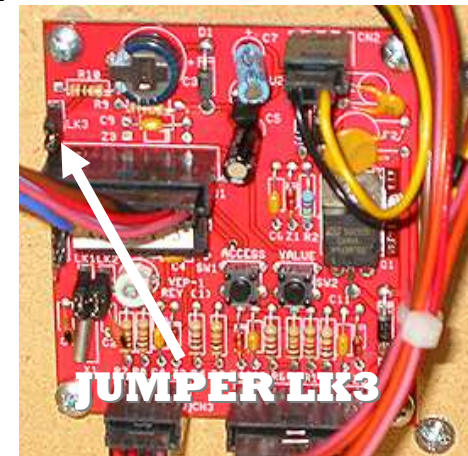

☹ Setting your Happy Hour start and end times to "0:00" does not keep them from ever coming ON, it keeps them from ever switching OFF. Set the start and end times the same, just select something besides 0:00.

🕒 The Clock time does not start until after you close the program mode. So when programming always set the clock ahead a few minutes to cover your adjustment time. Remember: no one complains if the happy hour starts a few minutes early, but they sure will if it starts a few minutes late. Just like the boss does if you show up late for work.



**These aren't Troubleshooting tips
They're tips for avoiding trouble altogether!**

☹ You won't be Happy if you overlap the times of Happy Hour 1 and Happy Hour 2. Try to keep Happy Hour 1 for the day settings. Happy Hour 2 is for evening and nights, because it has special program instructions that allow it to cross into the next day.




🕒 If your location does not use time play, it is not a bad idea to completely turn off this feature in your programming. When turned off, the player can just put in his money and press the start button. Too many times after a few drinks, players get confused with more than just one button to push. If they *can* press the wrong button, they *will*.




💰 Use and promote the Bonus pricing. Larger bills are easier to count, and leave more room in the stacker to hold more money between collections.



These aren't Troubleshooting tips They're tips for avoiding trouble altogether!

 The quick and easy way to get out of program mode: After you made the changes you want. Hit the Access button on the logic board ONE TIME and then the Time/Rack button on the coin door ONE TIME. Always check to make sure the Display is reading your normal game cost screen. Never hurts to test by crediting a game. Consider it a gift to your loyal customers.



 We receive calls that the clock is off and all of the program settings are wrong. This happens when the table is left in the program mode and the players are unable to start a game. They start hitting buttons randomly, the unit falls out of the program mode, followed shortly by confusion, chaos, and a call to Valley-Dynamo Tech Support.



- * The Access button has two other hidden features:
 - ◇ To clear unwanted credits, press the Access button for 1 second and release. The display should now show your normal attract pricing screen.
 - ◇ Hold the Access button down for 4 seconds you can see the electronic accounting. This will show you not only the running total but also how many bonus games, Happy hour, and time play games have been purchased.





**These aren't Troubleshooting tips
They're tips for avoiding trouble altogether!**

⌚ Take a moment to check the clock when you collect. It only takes an extra 30 seconds and prevents the angry service call when the league starts Wednesday night... or was supposed to start!!

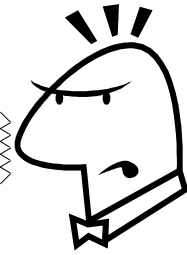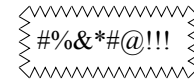

⚡ Also during collection, checking the battery voltage is also a good idea. When battery voltage drops, the programming does not function as well ...just like your car when your Oil is low.

☞ The table will not take more money once the Start button was pressed, until all credits have been played.